



## Thank you for your purchase!

Download complete product instruction manual at:

[geistglobal.com/support](http://geistglobal.com/support)

### Quick Start Guide for Initial Setup

1. Connect the unit to your computer or a network hub using an Ethernet cable.  
**\*Note:** Some PC's may require a crossover cable.
2. On the computer, locate your operating system's network settings and manually configure your "**Internet Protocol Version 4 (TCP/IPv4)**" properties to settings recommended below. Please refer to your operating system's manual or [geistglobal.com/setup](http://geistglobal.com/setup) for more detailed instructions.

Suggested Operating System Network Settings	
IP address:	192.168.123.1
Subnet mask:	255.255.255.0
Default gateway:	<leave blank>

3. Save your settings by clicking "**OK**" or "**Apply Now**" and exit the network settings.
4. Access the unit in a web browser via its default address:

**<http://192.168.123.123>**

5. Configure the device to your desired network address under the **Config** or **Config** ---> **Network** tab.
6. After you have finished configuring your unit to a specific network address, be sure to reset your computer's network settings to its previous values for normal network and internet usage.

### Additional Setup

**Clock:** The clock can be set by navigating to the **Config** or **Config** ---> **Admin** tab.

**\*Note:** The clock must be set before any data logging is possible.

**Emails:** Email settings are found under the **Config** or **Config** ---> **Monitoring** tab.

**Alarms:** Configure Alarm settings under the **Alarms** tab.

For further operations, we highly recommend a thorough review of our product instruction manual.

At Geist, we depend on the feedback from valued customers such as yourself to help us develop effective data center solutions. Please contact us at [products@geistglobal.com](mailto:products@geistglobal.com) with your comments and suggestions or call the Geist's office in your area.