

SwitchAir 2U Network Switch Cooling®

Effective cool air delivery for multiple rear rack mounted 1U switches Universal for rear intake or side intake switch types

Placing network switch ports facing the rear of rack where sever port density resides is very convenient and simplifies network cabling. Due to high switch port density, intake air is typically at the sides of the switch chassis with heat exhaust out the rear or opposite side of the switch. SwitchAir 2U ensures rear rack mounted switches are able to receive the required cool air from outside the rack. SwitchAir 2U delivers air to the switch via the SwitchAir 2U Channels. SwitchAir 2U works with switches having side intake - rear exhaust, side intake - side exhaust and rear intake - front exhaust. You can even stack switches with varying airflow patterns together.

3 - SwitchAir 2U


Cooling 5-6 1U Switches



Stack SwitchAir 2U in consecutive U-spaces. Up to six network switches cooled in this configuration.

SwitchAir 2U

A single SwitchAir cools 1-2 switches with side or rear air intake vents.

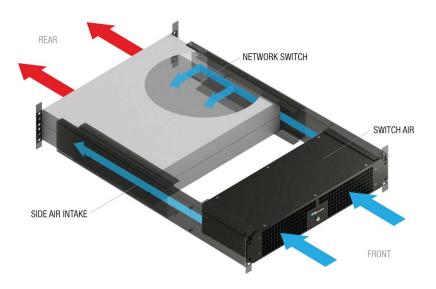

Why Choose Geist Cool?

- Stabilize your switch intake air temperature to within a few degrees of the rack front intake air temperature
- Installs in minutes and works with most side and rear intake network switches
- SwitchAir 2U can be installed while network switch is operational
- Single input cord runs on any voltage and continually delivers required air
- Geist Cool allows rapid return on investment—typically less than three months

SA2-002 Specification

Rail Depth 26 5/8" to 29 5/8"

Chassis Depth

Channel Depth 26"

Input Power / Indicator 90-264 VAC 50/60 Hz 15 watts

LED Power Indicator

Input Connector C14 Input

Airflow 94 CFM

Switch Intake/Exhaust Dual Side/Rear

Safety / Approvals

UL, cUL 60950, CE, FCC Class A

Warranty 2 Years

SwitchAir Installation

Attach Rear Air Channel

Attach Rear Air Channel to the Side Air Channel for rear air intake switches only. Discard for side air intake switches.

Install SwitchAir 2U Channel

 
Place cage nuts in all four channel mounting holes. Attach Channel to inside of front rail using screws at top and bottom cage nuts positions (rack rail cage nuts and screws not included). *Note - The two SwitchAir 2U channels are equipped with switch support brackets. If the switch does not requires additional supports or the brackets interfere with the existing switch hardware, remove the brackets by removing the two screws holding the brackets on each channel.

Install SwitchAir 2U Wipers

Attach SwitchAir Wipers to the sides of the SwitchAir Chassis using the screws provided. Do not install Wipers for network switches with rear air intake.


Install SwitchAir 2U Chassis


Connect to power before attaching SwitchAir 2U Chassis to rack front. Slide the SwitchAir 2U Chassis into the SwitchAir 2U Channels from the front of the rack. Attach the SwitchAir 2U Chassis using four screws (not included).




- Mitch Martin Oracle Chief Engineer

Installing SwitchAir 2U - with One to Two **Network Switches in Operation**

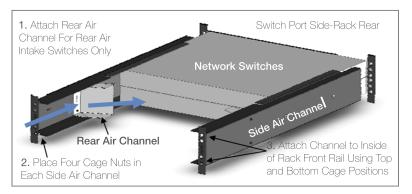

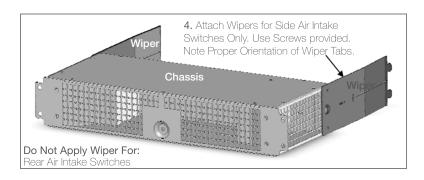

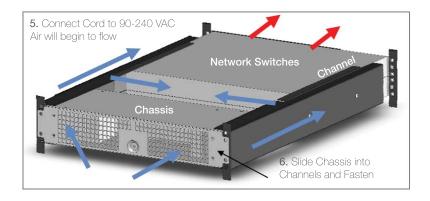

GM1178

geistglobal.com

+44 (0) 1823 275100

Geist Asia