




Instruction Manual
Environmental Monitoring Unit

RSE Series
Firmware Version 3

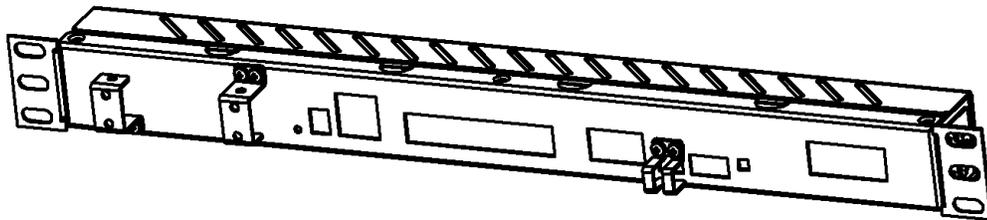

Contents

Specifications	3
Overview	3
Environmental	3
Electrical	3
Networking	3
Data Formats	3
EMC Verification	4
Installation	5
Guidelines	5
Mounting	6
Network Overview	7
Default IP Address	7
Initial Setup	7
Web Interface	10
Overview	10
Sensors Page	10
Logging Page	12
Display Page	13
Alarms Page	14
Configuration Page	15
Unit Configuration	20
Network Configuration	20
Time and Date	21
E-Mail	21
SNMP	23
Accounts and Passwords	23
Telnet	24
Camera Configuration	25
Admin Information	25
Alarms	25
Alarm Notifications	26
Alarm Types	26
Thresholds	26
Sensors	28
Overview	28
Internal Sensors	28
Temperature Offset	28
I/O Sensors	28
Remote Sensors	30
Data Logging and Display	30
Accessories	31
IP-Addressable Network Cameras	31
RSC Integration	31
Alternate Data Formats	31
Technical Support	32
Firmware Version	32
Firmware Updates	32
Resetting the Unit	32
Service and Maintenance	32
More Technical Support	32
Table of Figures	33
Revision History	34

Specifications

Overview

The RSE Series Environmental Monitoring Units provide remote environmental monitoring and alarming capability needed to detect climate conditions in data centers. The RSE Series environmental monitoring units are equipped with a built-in web server. Web pages, including graphs, are generated by the unit to monitor environmental conditions within the cabinet. No software other than a web browser is required for operation and several data formats are available. In RSE Series units, built-in sensors monitor Temperature, Relative Humidity, Airflow, Light Level and Sound Level. Optional external sensors and network cameras are also available. The RSE Series is available in two different versions; the RSE2X16 and RSE-B. The RSE2X16 and RSE-B are identical except for the scrolling LCD display and alarm buzzer features of the RSE2X16.

Environmental

Temperature

Operating:	10°C (50°F) min	45°C (104°F) max
Storage:	-25°C (-13°F) min	65°C (149°F) max

Humidity

Operating:	5% min	95% max	(non-condensing)
Storage:	5% min	95% max	(non-condensing)

Elevation

Operating:	0 m (0 ft) min	2000 m (6561 ft) max
Storage:	0 m (0 ft) min	15240 m (50000 ft) max

Electrical

6-12 Volts DC, 2 Amps

Networking

Protocols

HTTP, HTTPS (SSL/TLS), SMTP, POP3, ICMP, DHCP, TCP/IP, NTP, Telnet, Syslog

Ethernet Link Speed

10 Mbit; half-duplex

Data Formats

HTML, SNMP, CSV/Plain Text, XML

EMC Verification

This Class A device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Installation

Guidelines

- If the Environmental Monitoring Unit is installed in a cabinet the ambient temperature of the rack should be no greater than 45°C.
- Install the Environmental Monitoring Unit such that the amount of airflow required for safe operation of equipment is not compromised.
- Mount the Environmental Monitoring Unit so that a hazardous condition is not achieved due to uneven mechanical loading.

Mounting

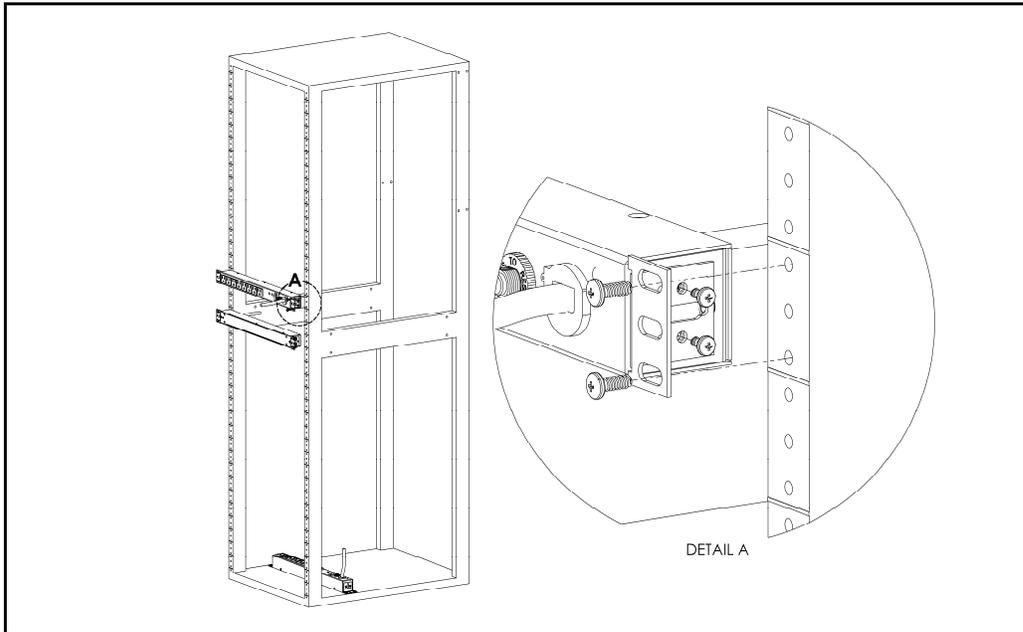


Figure 1: 19" Horizontal/Panel Mount Brackets (7938)

Using the 19" horizontal/panel mount brackets, attach Environmental Monitoring Unit to rack as shown

Network Overview

This product comes preconfigured with a default IP address set. Simply connect to the Environmental Monitoring Unit and access the web page with your browser.

Default IP Address

RSE Series units have a default IP address for initial setup and access to the unit if the assigned address is lost or forgotten. Once an IP address is assigned to a unit, the default IP address is no longer active. To restore the default IP address, press the reset button located below the network connector and hold for approximately 20 seconds. The idle and activity lights on the network connector will both light up when the IP address has been reset. The reset button is accessed through the white, circular hole located below the Ethernet jack.

Note: Pressing the reset button under the network connector will restore the default IP address and will also clear all password settings.

The Configuration page allows you to assign the network properties or use DHCP to connect to your network. Access to the unit requires the IP address to be known, so use of a Static IP or reserved DHCP is recommended. The default address is shown on the front of the unit:

- **IP Address:** 192.168.123.123
- **Subnet Mask:** 255.255.255.0
- **Gateway:** 192.168.123.1

Initial Setup

Connect the RSE Series unit to your computer using a crossover cable or hub/switch.

Windows XP

On your computer, go to "Start > Settings > Control Panel > Network and Dial Up Connections"

Right click on "Local Area Connection" and select "Properties"

Select "Use the following IP address". Use these settings:

- **IP Address:** 192.168.123.1
- **Subnet Mask:** 255.255.255.0
- **Gateway:** Leave blank

Click "OK" twice.

The unit should now be accessible in a web browser via the unit's permanent IP address: <http://192.168.123.123/>. See Unit Configuration (page 20) for details.

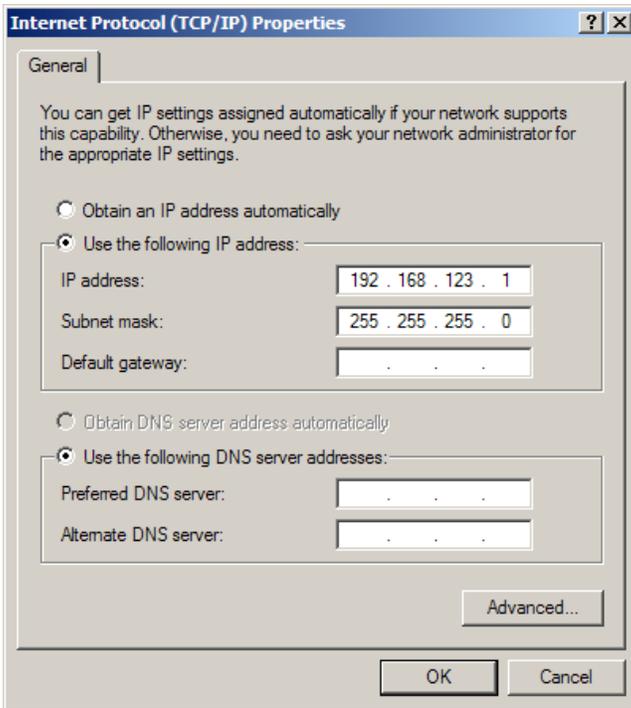


Figure 2: Network settings for initial setup.

MacOS X Leopard

Open System Preferences via the Dock or the Apple menu.

Select "Network" under "Internet & Network."

Select "Ethernet" from the list on the left side of the window and enter these settings on the right side of the window:

- **Configure:** Manually
- **IP Address:** 192.168.123.1
- **Subnet Mask:** 255.255.255.0
- **Router:** Leave blank

Hit "Apply" and confirm the changes.

The unit should now be accessible in a web browser via the unit's permanent IP address: <http://192.168.123.123/>. See Unit Configuration (page 20) for details.

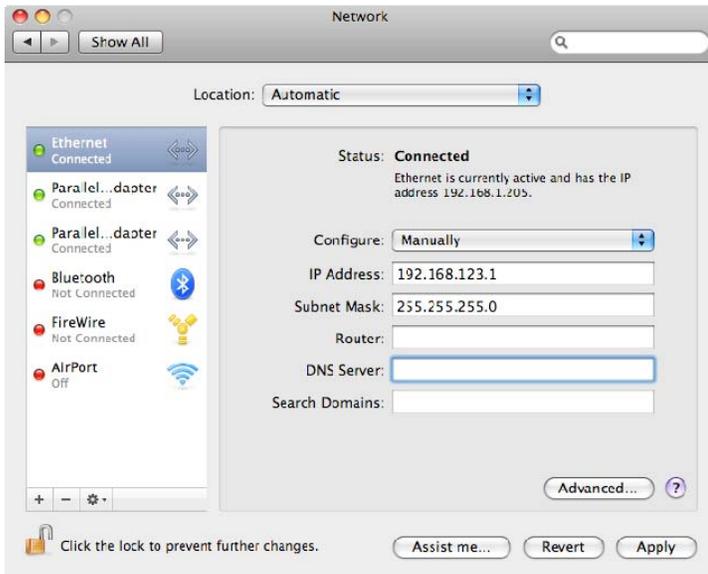


Figure 3: MacOS X network settings for initial setup

Web Interface

Overview

The unit is accessible via a standard, unencrypted HTTP connection as well as an encrypted HTTPS (SSL) connection. The following web pages are available:

Sensors Page

The front page, *Sensors*, gives both instantaneous and historical views of the unit's data. Real time readings are provided for all sensor data next to historical graphs.

Optional cameras may be added and their live snapshots are shown on this page. Plug-and-play sensors appear below the internal sensors when attached.

The menu bar allows access to the rest of the Environmental Monitoring Unit's functionality.

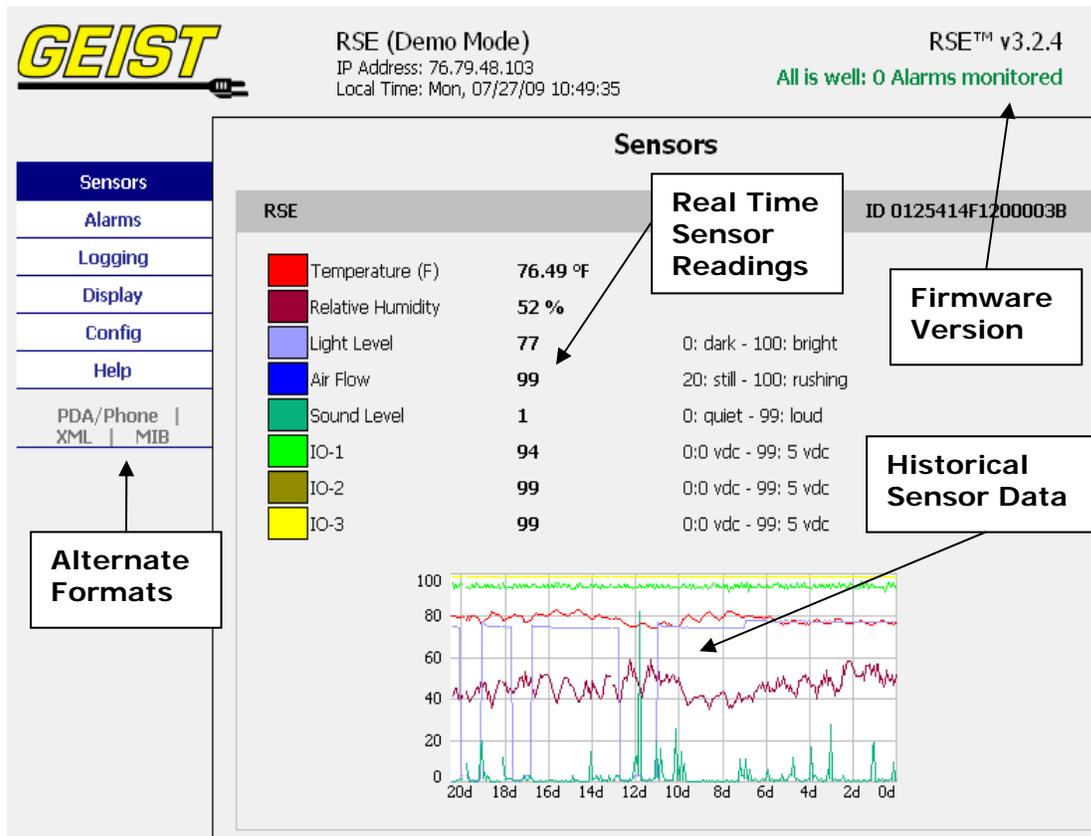


Figure 4: Sensors Page – Power Strip Circuit Data

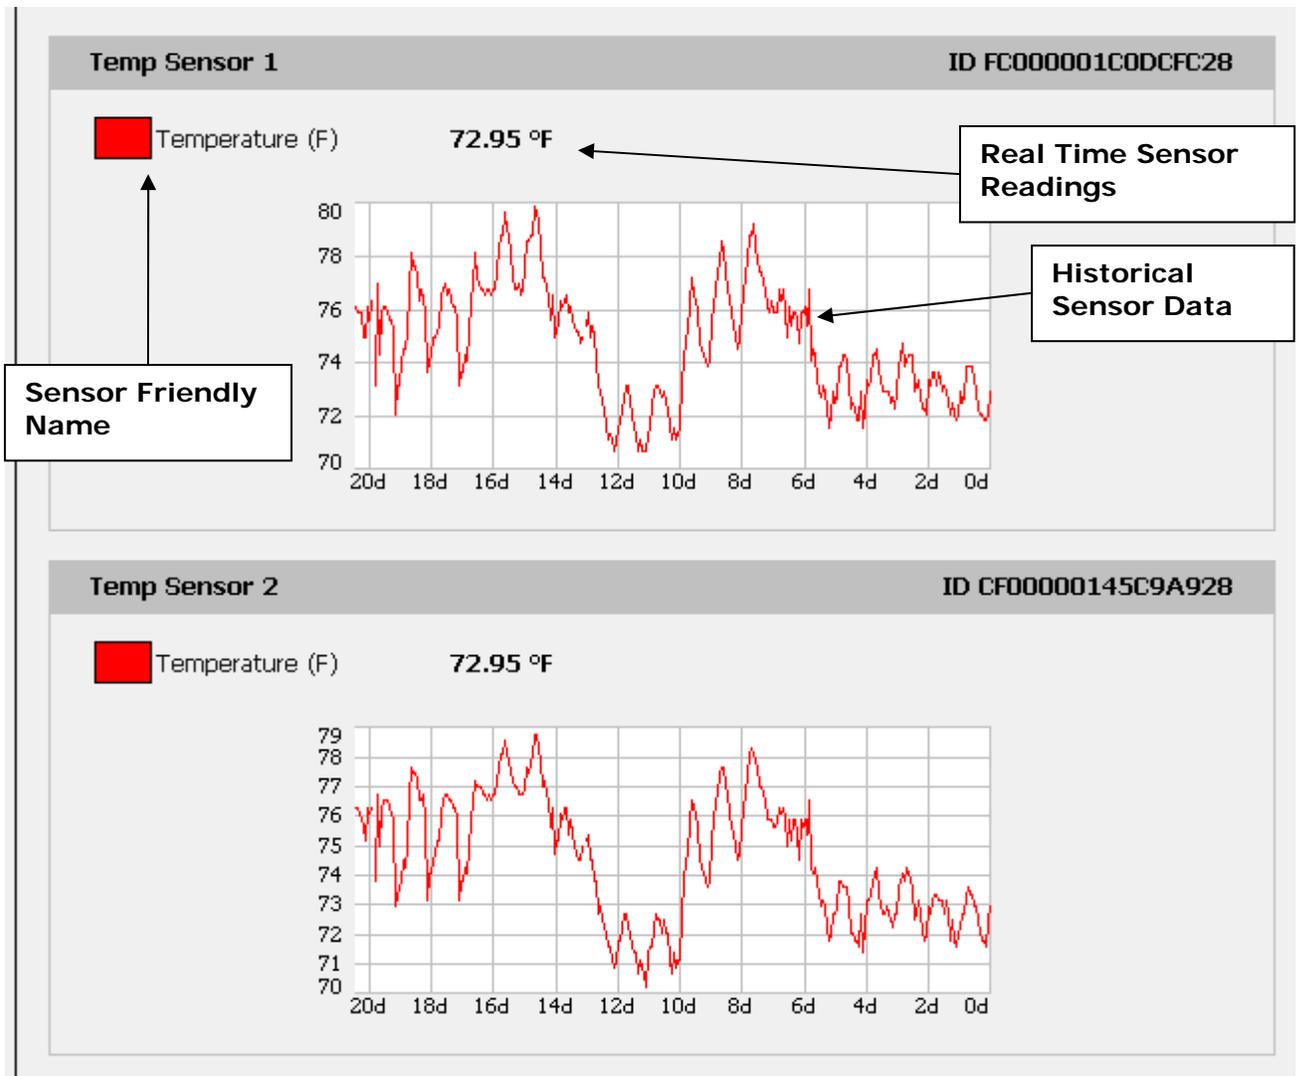


Figure 5: Sensors Page – Group and Sensor Data

Logging Page

The *Logging* page allows the user to access the historical data by selecting the desired sensors and time range to be graphed. Selected sensor values are logged into the data file at a rate of one point per minute. Please note that although data is logged once per minute, all sensor data used in the real time display and alarm functions is read at least once every 5 seconds for internal sensors and once every 30 seconds for external sensors. On RSE2X16 units only, checked readings are displayed on the LCD module. Recorded data is available for download in a comma-separated values (CSV) file.

The screenshot displays the GEIST RSE (Demo Mode) interface. At the top, it shows the IP Address (76.79.48.103), Local Time (Mon, 07/27/09 12:53:41), and RSE™ v3.2.4. A status message indicates "All is well: 0 Alarms monitored".

The main content area is titled "Logging" and contains a "Sensor Measurement Data Graph". On the left, a sidebar lists navigation options: Sensors, Alarms, Logging (highlighted), Display, Config, and Help. Below these are links for PDA/Phone, XML, and MIB.

The "Sensor Measurement Data Graph" section includes an "Update Graph" button and a note: "Note: Measurements selected on this page will scroll on the LCD display." Below this is a list of sensors with checkboxes:

- RSE 0125414F1200003B
 - Temperature (F)
 - Relative Humidity
 - Light Level
 - Air Flow
 - Sound Level
 - IO-1
 - IO-2
 - IO-3
- Temp Sensor 1 FC000001C0DCFC28
 - Temperature (F)

The graph shows a red line representing voltage over time, with a "Time Range" dropdown set to "15 Minutes". The y-axis ranges from -65 to -63, and the x-axis shows time from 14m to 0m. A callout box labeled "Historical Data" points to the graph line.

Below the graph, a "Real Time Readings" section shows a red square icon, the unit "Volts", a value of "-64.31 V", and the sensor type "-48Vdc Sensor". A callout box labeled "Real Time Readings" points to this section.

At the bottom of the graph area, it states "Maximum loggable time span: 20.08 days". There is a "Reset Logs" checkbox and an "Update Graph" button. A callout box labeled "CSV Data Access" points to a blue link: "Click here to download CSV log data".

Footer information includes: Unit Location: Geist Demo Rack, Unit Description: RSE, Admin: or Call, Support: support@geistmfg.com or Call 800.432.3219, and Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.

Figure 6: Logging Page

Display Page

The *Display* page allows the user to assign friendly names to internal and attached sensors as well as change the default temperature unit of measure for sensors. The display page also allows the user to select between the default and classic web page layouts. The default interface displays a vertical menu bar to the left of the main window, while the classic interface displays a horizontal menu bar across the top of the screen.

GEIST RSE (Demo Mode) RSE™ v3.2.4
 IP Address: 76.79.48.103 All is well: 0 Alarms monitored
 Local Time: Mon, 07/27/09 14:33:36

Display

General

Date Format: USA (MM/DD/YY)
 Temperature Unit: Fahrenheit
 Internal Temperature Offset: 0
WARNING: Internal temperature is pre-calibrated at the factory. The offset is necessary only when the unit is operating in a very low airflow environment where internal board heating inside the case causes internal temperature to read slightly warmer than the outside air.
 Interface Type: Default
 Scroll on LCD: Measurements

Devices

Unique Address	Device Type	Friendly Name
0125414F1200003B	climate	RSE
FC000001C0DCFC28	tempSensor	Temp Sensor 1
CF00000145C9A928	tempSensor	Temp Sensor 2
39000003D13AD814	digitalSensor	Digital Sensor
74000003D12BF514	waterSensor	Water Sensor
F8000003D1088D14	neg48VdcSensor	-48Vdc Sensor

Remove all unplugged devices

Analog Sensors

Sensor	On Device	Friendly Name
IO-1	Internal Sensors	IO-1
IO-2	Internal Sensors	IO-2
IO-3	Internal Sensors	IO-3

Unit Location: Geist Demo Rack
 Unit Description: RSE
 Admin: or Call
 Support: support@geistmfg.com or Call 800.432.3219
 Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.

Figure 7: Display Page

Alarms Page

The *Alarms* page allows the user to establish alarm conditions for each sensor reading. Alarm conditions can be established with either high or low trip thresholds. The alarms are displayed in different sections based on the device the alarm is associated with. Alarm options include a local Buzzer (RSE2X16 units only), Email and SNMP Trap. See Alarms (page 25) for details.

The screenshot shows the GEIST RSE Alarms configuration page. At the top, the GEIST logo is on the left, and system information (RSE (Demo Mode), IP Address: 76.79.48.103, Local Time: Mon, 07/27/09 14:38:25) and version (RSE™ v3.2.4) are on the right. A status bar indicates "All is well: 1 Alarms monitored". A left-hand navigation menu includes Sensors, Alarms (highlighted), Logging, Display, Config, and Help, along with links for PDA/Phone, XML, and MIB. The main content area is titled "Alarms" and contains three sections: "RSE", "Temp Sensor 1", and "Temp Sensor 2". Each section has a "Device Friendly Name" label, a "Temperature (C)" dropdown, a "High Trip" or "Low Trip" dropdown, a numerical value field, and checkboxes for "Buzzer", "E-mail", and "Traps". The "RSE" section shows a "High Trip" of 65.0 with all options checked. The "Temp Sensor 1" section shows a "Low Trip" of -25.0 with all options unchecked. The "Temp Sensor 2" section has an "Add New Alarm" button. Callout boxes with arrows point to: "Device Friendly Name" (RSE), "Alarm Type" (Temperature (C)), "Trip Type" (Low Trip), "Alarm Threshold" (the value field in Temp Sensor 1), and "Alarm Options" (the checkboxes in Temp Sensor 1).

Figure 8: Alarms Page

Configuration Page

The *Configuration* page has five sub-tabs; *Network*, *Monitoring*, *Diagnostics*, *Event Log*, and *Admin*. See Unit Configuration (page 20) for details.

Configuration Network Tab

The user can enter and update the network settings on the *Network* tab of the *Configuration* page. See Unit Configuration section for details.

GEIST RSE (Demo Mode) RSE™ v3.2.4
IP Address: 76.79.48.103 All is well: 2 Alarms monitored
Local Time: Mon, 07/27/09 14:42:45

Configuration

Network

MAC Address: 00:19:85:00:35:39
Enable DHCP:
IP Address:
Subnet Mask:
Gateway:

Web Server

Protocols:
HTTP Port:
HTTPS Port:
Telnet Service:

DNS Servers

Primary IP:
Secondary IP:

Unit Location: Geist Demo Rack
Unit Description: RSE
Admin: or Call
Support: support@geistmfg.com or Call 800.432.3219
Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.

Figure 9: Configuration Network Tab

Configuration Monitoring Tab

The user can enter and update the email alert, SNMP, and camera settings on the *Monitoring* tab of the *Configuration* page. See Unit Configuration section for details.

The screenshot displays the GEIST Configuration Monitoring Tab interface. The top header shows 'RSE (Demo Mode)', 'RSE™ v3.2.4', and 'All is well: 2 Alarms monitored'. The left sidebar contains navigation options: Sensors, Alarms, Logging, Display, Config, Network, Monitoring (selected), Diagnostics, Event Log, Admin, and Help. Below the sidebar are links for 'PDA/Phone', 'XPS', and 'Web'. The main content area is titled 'Configuration' and is divided into several sections:

- E-mail:** Includes fields for SMTP Server, SMTP Port (25), From* E-mail Address, To E-mail Address 1-5, POP3 Server, POP3 Port (110), Username, and Password. A 'Save Changes' button is at the bottom.
- System Status E-Mail Reports:** Contains an 'Add New Report' button.
- SNMP:** Includes a dropdown for 'SNMP Service' (set to 'Enabled'), fields for Read Community (public), Listen port for GET (161), Trap Community (private), Write Community (private), and Trap Type (V1 Trap). It also has fields for Trap IP Address:port 1 and 2, and a 'Save Changes' button.
- Initial SNMPv3 data:** Includes fields for Unauthenticated User (public), Authenticated Manager (manager), Manager Authentication Password (12345678), Manager Privacy Password (12345678), Trap User (Trap), Trap Authentication Password (12345678), Trap Privacy Password (12345678), authNoPriv User (authNoPriv), and authNoPriv Authentication Password (12345678). A 'Save Changes and/or Reset SNMPv3 Non-volatile RAM' button is present, with a note: 'Reset User/Access NVRAM will occur after next SNMP operation'.
- Cameras:** Includes fields for IP Address and Model for Cam 1, Cam 2, Cam 3, and Cam 4. All models are currently set to 'No camera'. A 'Save Changes' button is at the bottom.
- Test SNMP Trap and E-Mail:** Contains 'Send Test SNMP Trap' and 'Send Test E-Mail' buttons.

At the bottom of the page, there is a footer with the following text: 'Unit Location: Geist Demo Rack', 'Unit Description: RSE', 'Address or call', 'Support: support@geistmf.com or Call 800.432.3219', and 'Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.'

Figure 10: Configuration Monitoring Tab

Configuration Diagnostics Tab

The user can update the Syslog settings on the *Diagnostics* tab of the *Configuration* page.



RSE (Demo Mode)
IP Address: 76.79.48.103
Local Time: Mon, 07/27/09 14:50:23

RSE™ v3.2.4
All is well: 2 Alarms monitored

Configuration

Syslog

Facility: LOCAL0

Daemon Address:port 1:

Syslog Configuration

Subsystems	Severity							
	emergency	alert	critical	error	warning	notice	inform	debug
os	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
lwip	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
socket	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
macphy	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
flashfile	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
webserver	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
spiflash	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
device	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
goose	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
setvars	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
dynweb	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
snmp	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
alarms	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
email	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
rtclock	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
sntp	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
dns	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
datalogger	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
graphing	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
firmware	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
msgcatalog	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Unit Location: Geist Demo Rack
 Unit Description: RSE
 Admin: or Call
 Support: support@geistmfg.com or Call 800.432.3219
 Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.

Configuration Diagnostics Tab

Configuration Event Log Tab

The user can view the Event Log and update the Memory Syslog settings on the *Event Log* tab of the *Configuration* page.



RSE (Demo Mode)
IP Address: 76.79.48.103
Local Time: Mon, 07/27/09 14:53:30

RSE™ v3.2.4
All is well: 2 Alarms monitored

- Sensors
- Alarms
- Logging
- Display
- Config**
- Network
- Monitoring
- Diagnostics
- Event Log
- Admin
- Help

PDA/Phone | XML | MIB

Configuration

Memory Syslog

```

7/27/2009 19:53:30 device:get_ProductName
7/27/2009 19:53:30 device:get_ProductName
7/27/2009 19:53:30 device:get_ProductName
7/27/2009 19:53:30 device:get_ProductName
7/27/2009 19:53:30 device:duck_read_line: "65", 2 bytes
7/27/2009 19:53:30 device:duck_write: "d2 -64.20 "
7/27/2009 19:53:30 device:duck_read_line: "B6", 2 bytes
7/27/2009 19:53:30 device:duck_write: "d1 -48VDC "
7/27/2009 19:53:30 device:duck_read_line: "<<null>", 1 bytes
7/27/2009 19:53:30 device:duck_write: ":"
7/27/2009 19:53:29 device:duck_read_line: "<<null>", 1 bytes
7/27/2009 19:53:29 device:duck_write: ">"
7/27/2009 19:53:29 device:duck_read_line: "<<null>", 1 bytes
7/27/2009 19:53:29 device:duck_write: ":"
7/27/2009 19:53:29 device:device_task: elapsed time during scans 1160 mill
7/27/2009 19:53:29 device:duck_read_line: "<<null>", 1 bytes
7/27/2009 19:53:29 device:duck_write: "q"
7/27/2009 19:53:29 device:dev_getdata : data copy succeeded for device 1.
7/27/2009 19:53:29 device:dev_getdata : copy of data requested for device
7/27/2009 19:53:29 device:dev_getdata : data copy succeeded for device 0.
                    
```

Memory Syslog

Subsystems	Severity							
	emergency	alert	critical	error	warning	notice	inform	debug
os	<input type="checkbox"/>							
lwip	<input type="checkbox"/>							
socket	<input type="checkbox"/>							
macphy	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
flashfile	<input type="checkbox"/>							
webserver	<input type="checkbox"/>							
spiflash	<input type="checkbox"/>							
device	<input checked="" type="checkbox"/>							
goose	<input type="checkbox"/>							
setvars	<input type="checkbox"/>							
dynweb	<input type="checkbox"/>							
snmp	<input type="checkbox"/>							
alarms	<input type="checkbox"/>							
email	<input type="checkbox"/>							
rtclock	<input type="checkbox"/>							
sntp	<input type="checkbox"/>							
dns	<input type="checkbox"/>							
datalogger	<input type="checkbox"/>							
graphing	<input type="checkbox"/>							
firmware	<input type="checkbox"/>							
msgcatalog	<input type="checkbox"/>							

E-mail Send logs now

Unit Location: Geist Demo Rack
 Unit Description: RSE
 Admin: or Call
 Support: support@geistmfg.com or Call 800.432.3219
 Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.

Figure 12: Configuration Event Log Tab

GM1089.doc

18

Revision Date: 10/14/2010

Configuration Admin Tab

The user can set the system clock and administrative information on this tab. Additionally the user can set administrator and account passwords. See Unit Configuration section for details.

GEIST RSE (Demo Mode) RSE™ v3.2.4
 IP Address: 76.79.46.103 All is well: 2 Alarms monitored
 Local Time: Mon, 07/27/09 15:07:01

Configuration

All Parameters
 Reset ALL to Default Values
 Refresh DNS Cache

System Clock, set to GMT
 Set Clock method: NTP Server
 GMT to local, (+/-)hh:mm -05:00
 Month: 07 Day: 27 Year: 09 20 Hour: 07 Minute: 07 Second: 01
 (yy) (0-23) (0-59) (0-59)
 NTP primary server: 192.43.244.18
 192.43.244.19
 NTP secondary server: 129.6.15.28
 129.6.15.28
 Sync to NTP server period (seconds): 1800
 Save Changes

Name and Password Configuration
 NOTE 1: If Account currently has a password, leaving Old Password blank results in no changes to that account.
 NOTE 2: Administrator password may be used in the Old Password field of any account.
 NOTE 3: If setting New Password to blank, Account Name must also be blank.
 NOTE 4: If New Password is not blank, Account Name must not be blank.
 Administrator Account Name: geist
 If Blank, all access is granted without a password.
 Old Password:
 New Password:
 New Password Again: (again, to confirm)
 Warning: Record your password. Loss of password may require 48 hours to recover.
 Control Account Name:
 If Blank, Control and View Only access is granted without a password.
 Old Password:
 New Password:
 New Password Again: (again, to confirm)
 Warning: Record your password. Loss of password may require 48 hours to recover.
 View Only Account Name:
 If Blank, View access is granted without a password.
 Old Password:
 New Password:
 New Password Again: (again, to confirm)
 Warning: Record your password. Loss of password may require 48 hours to recover.
 Save Changes

Admin Info
 Contact Name:
 Contact Email: (sysContact)
 Contact Phone:
 Device Location: Geist Demo Rack (sysLocation)
 Device Description: RSE (sysName)
 Save Changes

Upload System Firmware
 Firmware package file: Browse
 Upload New Firmware
 Firmware upload may take a few minutes. Please wait for response from browser.

Unit Location: Geist Demo Rack
 Unit Description: RSE
 Admin: or Call
 Support: support@geistmfg.com or Call 800.432.3219
 Copyright © 2003-2009 Geist Manufacturing All Rights Reserved.

Figure 13: Configuration Admin Tab

Unit Configuration

Network Configuration

The unit's network configuration is set on the *Network* tab of the *Configuration* page. Settings pertaining to the unit's network connection are:

The screenshot displays the configuration interface for a device, organized into three distinct sections, each with a 'Save Changes' button.

- Network Section:** Shows the MAC Address as 00:19:85:E0:00:CC. The 'Enable DHCP' checkbox is unchecked. The IP Address is 192.168.120.42, Subnet Mask is 255.255.255.0, and Gateway is 192.168.120.1.
- Web Server Section:** Shows Protocols set to 'HTTP and HTTPS'. The HTTP Port is 80 and the HTTPS Port is 443. The Telnet Service is set to 'Enabled'.
- DNS Servers Section:** Shows the Primary IP as 208.67.222.222 and the Secondary IP as 208.67.222.220.

Figure 14: Network Configuration

- **DHCP:** Allows the unit to request a dynamic IP address from a server on the network.
- **Static IP Address/Net Mask/Gateway:** When not using a dynamic address, enter static network configuration information here.
- **Telnet Service:** Enable or disable the built-in Telnet server. See Telnet (page 24) for details.
- **HTTP Services:** Enables/disables access via HTTP and HTTPS. Available options are: HTTP and HTTPS, HTTP only, and HTTPS only. It is not possible to disable the web interface completely.
- **HTTP/HTTPS Server Port:** Changes the TCP port that each server listens on.
- **DNS Servers:** Allows the unit to resolve host names for Email, NTP and SNMP servers as well as cameras.

Time and Date

The system clock is set on the *Admin* tab of the *Configuration* page. The unit comes preconfigured with the IP addresses of two NIST time servers and is set to the Central Time Zone (-0500 GMT). Should a local time server be preferred, enter its IP address into the "NTP primary server" box and click the "Save Changes" button. Clearing the time server addresses and clicking "Save Changes" will set the time servers back to the defaults. The unit attempts to contact the time servers during boot up and periodically while running. Until a time server is contacted or the system clock is manually set, all log time stamps will present time as the number of seconds since the unit was powered up and graphs will not be shown.

System Clock, set to GMT

Set Clock method:

GMT to local, (+/-)hh:mm

Month	Day	Year	Hour	Minute	Second
<input type="text" value="05"/>	<input type="text" value="07"/>	<input type="text" value="09"/>	<input type="text" value="15"/>	<input type="text" value="46"/>	<input type="text" value="46"/>
		(yy)	(0-23)	(0-59)	(0-59)

NTP primary server
192.43.244.18

NTP secondary server
129.6.15.28

Sync to NTP server period
(seconds)

Figure 15: Time Settings

The time, date, IP address and friendly name of the unit are displayed in the top of each web page.

RSE (Demo Mode)
IP Address: 76.79.48.103
Local Time: Mon, 07/27/09 15:36:26

Figure 16: Time and Date Display

Note: The time and date are not adjusted for daylight savings time. Setting the time zone offset forward and backward an hour will cause a gap or overwriting of logs, respectively.

E-Mail

The unit is capable of sending e-mail to as many as five addresses at once. Most SMTP and ESMTP servers are compatible. Authentication options are None, POP3 (POP-before-SMTP) or ESMTP. The e-mail configuration is set on the *Monitoring* tab of the *Configuration* page.

E-mail

SMTP Server:

SMTP Port:
Leaving the POP3 Server blank with the Username/Password filled in and using SMTP Port 465 enables ESMTP/SSL.

"From" E-mail Address:

To E-mail Address 1:

To E-mail Address 2:

To E-mail Address 3:

To E-mail Address 4:

To E-mail Address 5:

POP3 Server:

POP3 Port:
Leaving the POP3 Server blank with the Username/Password filled in enables ESMTP/TLS. No POP3 Server and no Username/Password enables no authentication.

Username:

Password:

Figure 17: E-Mail Configuration

An SMTP server as well as "From" and "To" addresses are required to send e-mails. Some mail servers may require a username and password. In most cases, the username does not have to match the "From" address, but does need to be a valid user on the authenticating server. Microsoft Exchange servers will have to be set to allow SMTP relay from the IP address of the unit. In addition, a test email can be sent from the bottom of the *Monitoring* tab of the *Configuration* page.

Note: The unit cannot receive e-mails. The POP3 server is used strictly for authentication and is not required when using None or ESMTP.

Status Reports

When enabled, the unit will periodically send a full status report to all "To" e-mail addresses selected for the report. The report includes current unit data from all attached sensors as well as alarm states. Reporting frequency options are: weekly, hourly, every 2, 3, 4, 6, 8, 12, 24, or 48 hours. E-mail addresses are selected when the report is created by checking the corresponding e-mail destination box. Allowing the cursor to hover over an e-mail destination box will display the e-mail address that the box is associated with.

System Status E-Mail Reports

Report Time: hour: min:
(0-23) (0-59)

Report Period: ▼

E-mail Destinations:

Delete This Report:

Figure 18: Email Report Settings

SNMP

The unit supports retrieval of all data via Simple Network Management Protocol (SNMP) v1 and v2c. In addition, alarm traps can be sent to up to two IP addresses. The SNMP configuration is entered on the *Monitoring* tab of the *Configuration* page.

SNMP

SNMP Service: ▼

Read Community:

Listen port for GET:

Trap Community:

Write Community:

SNMP System Name:

SNMP System Location:

SNMP System Contact:

Use v2c notify instead of trap:

Trap IP Address:port 1:

Trap IP Address:port 2:

Figure 19: SNMP Configuration

The default community string is “public” and the MIB is downloadable via a link at the top of the unit’s web page.

Accounts and Passwords

The RSE Series unit’s offer account security options that are entered on the *Admin* tab of the *Configuration* page. There are three levels of account security:

- **Administrator:** Password protects the Display, Alarms and Configuration pages.
- **Control Access:** Password protects the Control Actions and Control Settings pages.
- **View-Only:** Password protects the Sensors, PDA, WAP and XML pages.

Name and Password Configuration

NOTE 1: If Account currently has a password, leaving Old Password blank results in no changes to that account.
 NOTE 2: Administrator password may be used in the Old Password field of any account.
 NOTE 3: If setting New Password to blank, Account Name must also be blank.
 NOTE 4: If New Password is not blank, Account Name must not be blank.

Administrator Account Name

If blank, all access is granted without a password.

Old Password

New Password

New Password Again (again, to confirm)

Warning: Record your password. Loss of password may require 48 hours to recover.

Control Account Name

If blank, Control and View Only access is granted without a password.

Old Password

New Password

New Password Again (again, to confirm)

Warning: Record your password. Loss of password may require 48 hours to recover.

View Only Account Name

If blank, View access is granted without a password.

Old Password

New Password

New Password Again (again, to confirm)

Warning: Record your password. Loss of password may require 48 hours to recover.

Figure 20: Account Configuration

User account names may include alphanumeric characters, spaces and underscores. Passwords may include alphanumeric characters and underscores.

Note: The Administrator account must be active to enable the Control Access and View-Only accounts.

Note: The Control Access account must be active to enable the View-Only account.

Note: The account names "root" and "admin" are disabled for security reasons and cannot be re-enabled.

Warning: Record your passwords. To reset lost passwords, follow the instructions for resetting the unit's IP address and passwords given in the Default IP Address section. To generate a temporary recovery password to access the unit, contact customer service from a location where the unit can be accessed via the internet.

Telnet

The unit provides a Telnet server for basic monitoring via the command line. The Administrator account must be enabled to use the Telnet interface. Type "help" after logging in to the unit to see a list of available commands. The Telnet service can be disabled under "Web Server" on the *Network* tab of the *Configuration* page.

Note: All data sent via Telnet is unencrypted. Some settings can be changed and user names and network settings are available via Telnet. In secure environments, it is recommended that Telnet be disabled.

Camera Configuration

Enter the domain names/IP addresses and models of up to four IP-addressable network cameras in the “Cameras” section of the *Monitoring* tab on the *Configuration* page. The unit will present a linked snapshot from each camera on the *Sensors* page.

The screenshot shows a web form titled "Cameras" with a grey header. It contains four identical rows for configuring cameras. Each row has a label "Cam 1, IP Address:", "Cam 2, IP Address:", "Cam 3, IP Address:", and "Cam 4, IP Address:" followed by a text input field containing "0.0.0.0". Below each IP field is a label "Model:" followed by a dropdown menu with "No camera" selected. At the bottom right of the form is a "Save Changes" button.

Figure 21: Configuration and Supported Models

Note: Each camera must be set to allow anonymous access to enable this feature.

Admin Information

Information entered in the “Admin Info” section of the *Admin* tab of the *Configuration* page will show up at the bottom of the unit’s web interface.

The screenshot shows a web form titled "Admin Info" with a grey header. It contains five rows of input fields: "Contact Name:" with a text field containing "ContactName"; "Contact Email:" with a text field containing "ContactEmail" and "(sysContact)" to its right; "Contact Phone:" with a text field containing "ContactPhone"; "Device Location:" with a text field containing "Geist Demo Rack" and "(sysLocation)" to its right; and "Device Description:" with a text field containing "RSE" and "(sysName)" to its right. At the bottom right of the form is a "Save Changes" button.

Figure 22: Admin Information Fields

The screenshot shows a grey box containing the following text: "Unit Location: Geist Demo Rack", "Unit Description: RSE", "Admin: [ContactName](#) or Call [ContactPhone](#)", "Support: support@geistmfg.com or Call 800.432.3219", and "Copyright © 2003-2009 [Geist Manufacturing](#) All Rights Reserved."

Figure 23: Admin Information Display

Alarms

Alarm Notifications

The RSE2X16 supports three types of alarm notification, while the RSE-B supports two types of alarm notification:

- **E-Mail (RSE2X16 and RSE-B):** The unit can be configured to send alarm e-mails to up to five recipients.
- **SNMP (RSE2X16 and RSE-B):** The unit can be configured to send SNMP traps to up to two trap servers.
- **Buzzer (RSE2X16 Only):** The RSE2X16 unit supports an additional audible alarm notification. The check box for the buzzer alarm will not be displayed on RSE-B units.

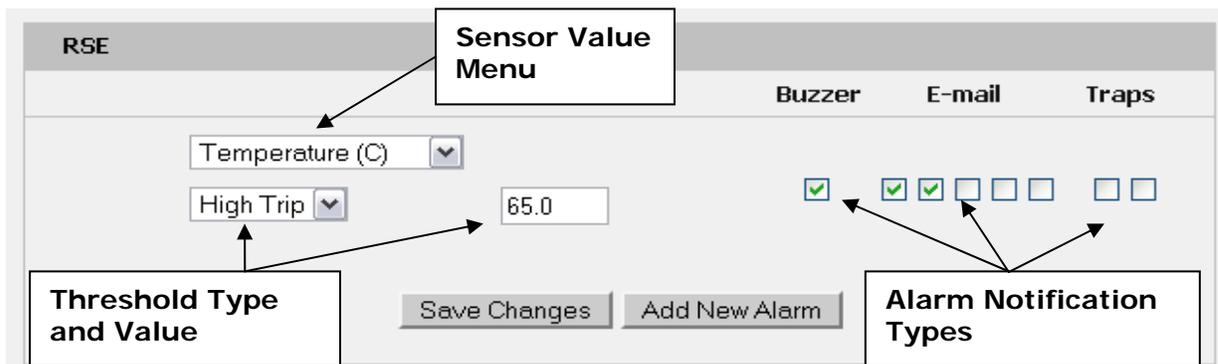


Figure 24: Alarm State Menu

The unit is capable of any combination of the above alarms at once. Alarm type combinations are selected per alarm via the check boxes which are displayed for each alarm on the Alarms page.

Alarm Types

The RSE2X16 and RSE-B provide three types of alarm messages via E-Mail and SNMP:

- **Trip:** Occurs when a sensor value goes above a high trip threshold or below a low trip threshold.
- **Clear:** Occurs when a sensor already in the Tripped or Unplugged state goes back into its normal range.
- **Unplugged:** Occurs when a sensor with an alarm set loses contact with the main unit due to the sensor being physically unplugged or another communications error.

Alarms can be added for each internal device or external sensor displayed on the Alarms page. An alarm is added by pressing the "Add New Alarm Button" and selecting the sensor value to be monitored from a drop down menu.

Thresholds

The user must set a trip threshold and type for each alarm that is added to the Alarms page. The threshold type is chosen as either "High Trip" or "Low Trip" from a drop down menu when the alarm is created. The threshold value is typed into a data window when the alarm is created. Alarms are triggered based on the selected sensor's data and the trip threshold type and value. Alarm settings can be edited or deleted at any time.

Analysis of each unit is recommended before setting alarm thresholds as some of the values monitored by the unit are relative values, whose scale will differ slightly between units. Allow each unit to operate under normal, steady-state conditions for several hours before setting alarm thresholds. By allowing the sensors to operate for several hours, the user can better understand what the normal variations are; thereby allowing the user to choose alarm thresholds that will not trigger numerous false alarms.

Note: Changes in settings take a few moments to become active. Rapidly resetting alarm values may not provide the desired results. Allow up to 2 minutes after changing a setting before modifying it again.

Sensors

Overview

All internal sensors are measured every 5 seconds. External sensors are measured every 10 to 30 seconds, depending on the number of devices connected. Sensor data collected by the RSE Series units will provide useful trend analysis data. While all values are not absolute in relation to a known unit, trend analysis of the data allows users to view changes and draw useful conclusions about what is happening over time in the monitored environment.

Internal Sensors

The RSE Series units contain the following onboard sensors:

- **Temperature:** Measures temperature and can be displayed in °C or °F. The accuracy is ± 1 °F from -50 °F to 185 °F. Note: This sensor may be heated by internal circuitry in the unit; a temperature offset is available to re-calibrate.
- **Relative Humidity:** Measures the percent of Relative Humidity $\pm 5\%$.
- **Airflow:** Measures airflow is a unit-less value. A reading of 0 to 99 is based on the temperature drop of a heated element in open air vs. still air. This value can be set to 20 in any airflow condition using Telnet. Note: Due to the method of measurement, sharp changes in temperature can affect the accuracy of this sensor. Sensitivity will also be affected by temperature.
- **Light Level:** Measures Light Level as a unit-less reading of 0 to 99.
- **Sound Level:** Measures Sound Level as a unit-less reading of 0 to 99.
- **IO-1:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.
- **IO-2:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.
- **IO-3:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.

Temperature Offset

The internal temperature sensor is pre-calibrated at the factory and the values reported by this sensor are accurate. However, due to low airflow and normal board heating, the temperature sensor may read a few degrees higher than any external sensors that are attached. To counteract this, an offset of up to -7 °C or °F is configurable on the *Display* Page.

I/O Sensors

The RSE Series units come equipped with three I/O ports for connecting additional external sensors such as Water and Door Sensors. The three ports are designed to accept a 0-5 Vdc analog input; alternatively, an internal 100K pull up resistor to 5 V allows for the use of dry contacts. The I/O port input is converted to a digital number ranging from 0 to 99 and is displayed on the *Sensors* page. Unused I/O ports will display a value of 99.

Water sensors act as conductivity bridges. Moisture across the contacts causes the value to drop. Door switches can be wired in a serial connection; if the chain is broken the entire group is classified as open. The limiting factor on the I/O ports is the length of the wire, found to be around 400'.

Water Sensors

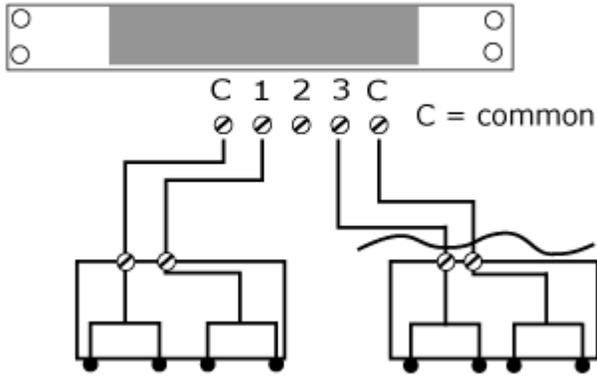


Figure 25: Water Sensor Wiring Example

Door Switches - Extended

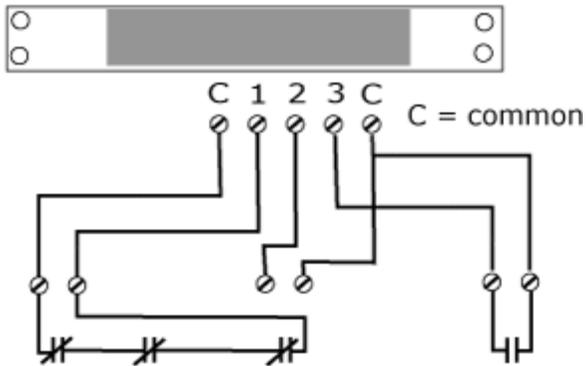


Figure 26: Door Sensor Wiring Example

Additional Optional I/O Sensors

- **RWS:** Water Sensor
- **RDPS:** Door Sensor
- **SA-1:** Smoke Alarm
- **RCP-2:** 125 V City Power Monitor
- **WSK-10:** 10' Water Sensing Cable Kit
- **WSK-40:** 40' Water Sensing Cable Kit
- **-48 VDCM:** Power Monitor
- **30 VDCM:** Power Monitor

Remote Sensors

Available Sensors

- **RT:** Temperature
- **RTAFHD3:** Temperature / Air Flow / Humidity / Dew Point
- **CCAT:** Converts analog I/O Sensors to Remote Digital Sensors

*RTAF, RTAFH & RTHD sensors have been discontinued and replaced by the RTAFHD3 sensor. Some Geist R-Series devices may require a firmware update to allow for proper compatibility with the new RTAFHD3 sensors.

If your Geist R-Series device is using firmware version 2.xx you will want to make sure you are using firmware version 2.94 or newer.

If your Geist R-Series device is using firmware version 3.xx you will want to make sure you are using firmware version 3.5.0 or newer.

Please contact Geist Support at 800-432-3219 if you need assistance locating your current version or upgrading to the new firmware version

RTAFHD3 Compatibility

The (G)RTAFHD3 sensor cannot be utilized in combination with the discontinued (G)RTAF and (G)RTAFH sensors or (G)RTHD sensors built prior to 2010. If you desire to add (G)RTAFHD3 sensors to an existing installation currently utilizing incompatible sensors, please contact Customer Service for installation options.

Connecting Remote Sensors

Plug-and-play remote sensors may be attached to the unit at any time via the RJ-12 connectors on the face of the unit. In some cases splitters may be required to add additional sensors. Each sensor has a unique serial number and is automatically discovered and added to the web page. Up to sixteen sensors may be connected.

The display order of the sensors on the web page is determined by the serial number of each sensor. Friendly names for each sensor can be customized on the *Display* page.

Note: The sensor uses Cat. 3 wire and RJ12 connectors. Wiring must be straight-through: reverse polarity will temporarily disable all sensors until corrected.

Note: The sensors use a serial communication protocol and are subject to network signaling constraints dependent on shielding, environmental noise, and length of wire. Typical installations allow runs of up to 600 feet of sensor wire.

Data Logging and Display

All data collected by the unit can be graphed. The *Logging* page allows the user to select graphed content to be logged. Selected sensor values are logged into the data file at a rate of one point per minute and will be displayed on the unit's LCD display (RSE2X16 only). The number of selected sensors determines the maximum data logging time span. This period is calculated and displayed on the *Logging* page. The oldest data will be deleted when the onboard memory fills up in order to make room for new data.

Accessories

IP-Addressable Network Cameras

The unit is able to interface with up to four IP-addressable network cameras. A live snapshot from each camera will be displayed on the unit's *Sensors* page underneath the main unit's graph. Clicking on a snapshot opens the camera's website in a new browser window.



Figure 27: Camera Images

Camera model and IP address are entered on the *Monitoring* tab of the *Configuration* page.

Note: Some cameras require additional software downloads to display live video in a web browser.

RSC Integration

For users with multiple units, Geist RSC software offers:

- Convenient, single-window monitoring of multiple units via simple web-based interface
- Streamlined firmware updating
- Consolidation of alarm settings

See <http://www.geistmfg.com> for more information.

Alternate Data Formats

In addition to the full access, control and configuration available via a desktop web browser, RSE Series products present data in multiple formats for easy integration with other monitoring systems. Data formats available via links on the unit's web page are:



Figure 28: Alternate Format Links

- **PDA/Phone:** Presents data in a format best-suited for PDA or cellular phone web browsers.
- **XML:** Extensible Markup Language. Presents data in a structured tree for use with automated scripts and monitoring systems.
- **MIB:** Management Information Base. Downloads the MIB for use with SNMP monitoring tools.

Technical Support

Firmware Version

The firmware version is located in the upper right section of the web interface header, represented by v3.y.xx. Before contacting support, it is recommended that the Environmental Monitoring Unit first be updated to the latest firmware version. If this is not possible, please have the unit's existing firmware version number available when contacting technical support.

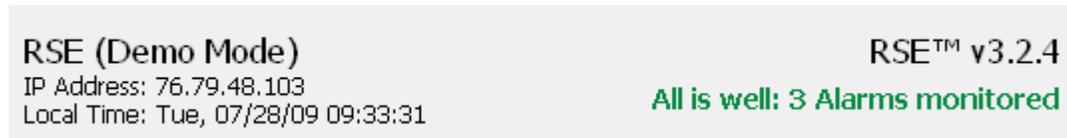


Figure 29: Web Page Header

Firmware Updates

Keep your unit updated with the latest firmware releases or sign up for notifications at the following website: <http://www.geistmfg.com/GeistUS/Docs/downloads.htm>.

Resetting the Unit

Should the Environmental Monitoring Unit lose communication, the processor may be manually rebooted by momentarily removing power from the unit.

Service and Maintenance

No service or maintenance is required. Do not attempt to open the unit or you may void the warranty. No serviceable parts inside.

More Technical Support

<http://www.geistmfg.com>
(800) 432-3219
Email: support@geistmfg.com
Or contact your distributor.

Table of Figures

Figure 1: 19" Horizontal/Panel Mount Brackets (7938)	6
Figure 2: Network settings for initial setup.....	8
Figure 3: MacOS X network settings for initial setup.....	9
Figure 4: Sensors Page – Power Strip Circuit Data	10
Figure 5: Sensors Page – Group and Sensor Data	11
Figure 6: Logging Page	12
Figure 7: Display Page.....	13
Figure 8: Alarms Page	14
Figure 9: Configuration Network Tab.....	15
Figure 10: Configuration Monitoring Tab.....	16
Figure 11: Configuration Diagnostics Tab.....	17
Figure 12: Configuration Event Log Tab.....	18
Figure 13: Configuration Admin Tab.....	19
Figure 14: Network Configuration.....	20
Figure 15: Time Settings.....	21
Figure 16: Time and Date Display.....	21
Figure 17: E-Mail Configuration.....	22
Figure 18: Email Report Settings.....	23
Figure 19: SNMP Configuration	23
Figure 20: Account Configuration	24
Figure 21: Configuration and Supported Models.....	25
Figure 22: Admin Information Fields	25
Figure 23: Admin Information Display	25
Figure 24: Alarm State Menu	26
Figure 25: Water Sensor Wiring Example.....	29
Figure 26: Door Sensor Wiring Example	29
Figure 27: Camera Images	31
Figure 28: Alternate Format Links	31
Figure 29: Web Page Header	32

Revision History

Revision	Date	Notes	Approved By
1.0	8/04/2009	Initial Version	BGP
1.1	6/10/2010	Minor Text Updates	BGP
1.2	10/14/2010	RTAFHD3 Information Added	BGP